

IMPORTANT SAFETY INSTRUCTIONS

When using electrical appliances, especially when children are present, basic safety precautions should always be followed, including the following:

READ ALL INSTRUCTIONS BEFORE USING KEEP AWAY FROM WATER

DANGER – Any hair dryer is electrically live even when the switch is off. To reduce the risk of death or injury by electric shock:

- 1. Always unplug appliance immediately after using.
- 2 Do not use while bathing or in a shower
- 3. Do not place or store appliance where it can fall or be pulled into a tub or sink.
- 4. Do not place in, or drop into, water or other
- 5. If an appliance falls into water, unplug it im-

mediately. Do not reach into the water. WARNING - To reduce the risk of burns, elec-

trocution, fire, or injury to persons:

1. This appliance should never be left unattended when plugged in.

- 2. This appliance should not be used by, on, or near children or by individuals with certain disabilities.
- 3. Use this appliance only for its intended use as described in this manual. Do not use attachments not recommended by the manufacturer.
- 4. Never operate this appliance if it has a damaged cord or plug, if it is not working properly, or if it has been dropped into water. Return the appliance to a Conair service center for examination and repair.



pacia abajo mientras seca. gopie nn poco las puntas cada sección de cabello y pcm de diametro), estire grande (aproximadamente nasuqo nu cebillo redondo secciones de cabello. enber jisa, trabaje con Para crear una apariencia

OUASIJA

la forma deseada. strás y peine el cabello en vueiva la cabeza nacia dne el cabello esté seco, maximo volumen. Una vez cabello para obtener el ei tiujo de aire a la raiz dei abajo mientras seca. Dirija voicee ia cadeza nacia Para crear mayor volumen, СПЕВРО Ү УОСИМЕИ

mantener su cabello saludable, brillante y dócil. cnando se usa temperaturas bajas, y ayuda a secs el cabello de manera muy eticaz, incluso El secador ionico protesional con turmalina CONOZCA SU SECADOR

belo y tijara ei peinado. disparo de aire frio. Esto sellará el tallo del suave, fuego fije et modelado usando et completo usando un ajuste de temperatura pncies y ondas, seque el cabello casi por Cuando se usa el secador para crear cabello antes de modelar con el secador iavados, rocie un poco de agua sobre ei 4. Para realizar retoques rápidos entre

plug will fit in a polarized outlet only one way. If the

plug does not fit fully in the outlet, reverse the plug.

If it still does not fit, contact a qualified electrician.

For use in the U.S.A., the voltage selector switch

should be placed in the 125 position. For use in

several countries overseas, the voltage selector

may need to be placed in the 250 position. Con-

firm the voltage available at each overseas loca-

tion before using the appliance. For connection

adapter of the proper configuration for the

Flick the dual voltage switch to the 125 position.

In this position, the dryer operates on all avail-

First put the HI-LO switch into LO. Flick the

220-250V while set at LO, the dryer operates

change to 125 position when operating on

dual voltage switch to the 250 position. At

only at high speed with high heat. **Do not**

attempt to operate the HI-LO switch or

220-250V. The switches must be set and

remain in the LO and 250 positions. A plug

adapter may be necessary in certain countries

to a 250 volt supply, use an attachment plug

Do not attempt to defeat this safety feature.

FOR DUAL VOLTAGE DRYERS

power supply receptacle.

For 110-125 Volt Operation

able heat and speed settings.

For 220-250 Volt Operation

el secador al mismo tiempo que el cabello. flujo de aire en una sección solamente. Mueva 3. Para no lastimar el cabello, no concentre el

esté usando.

sin obstrucciones y libres de pelo mientras io 2. Mantenga las entradas de aire del aparato y agregar prino.

controlar el encrespamiento y los pelos sueltos, dne ayudan a reducir ia electricidad estatica, Su secador genera una nube de iones negativos pacia el cabello, no hacia el cuero cabelludo. y uniformemente, dirigiendo el flujo de aire simultaneamente hacia las puntas, lentamente hacia cada sección. Mueva el cepillo y el secador simultaneamente, dirija el flujo de aire caliente el secador y un cepillo de modelado de agua. Divida el cabello en secciones. Usando Sequeio con una toana para entrinar el exceso productos de su elección. Enjuáguelo bien. 1. Lave y acondicione su cabello con los

FUNDAMENTOS DEL SECADO

productos de acabado de calidad superior. cabello con champues, acondicionadores y de cabello bien mantenido. Siempre cuide su La mejor apariencia empieza por un recorte

GUIA PARA UN SUPER MODELADO

autorizado para que 10 revisen y 10 reparen. el caso contrario, llévelo a un centro de servicio El aparato deberia funcionar normalmente. En aparato y déjelo enfriar, luego vuelva a enchufarlo. funcionamiento. En tal caso, desenchute el durante el uso, esto podria indicar un mal Si el secador se apagara y el enchufe saltara



qe csqs nzo bsis szednisize dne ezte

6. Pruebe el cortacircuito de seguridad antes reajustario. que lo lleve a un centro de servicio. No intente 5. Si el aparato cae al agua, es muy importante aparato.

poton de reajuste y vueiva a enchutar el aparato este desenchulado, luego apriete el 3. Para reajustar el enchufe, asegúrese que el clic y el boton de reajuste saltara. 2. El aparato dejará de funcionar, se oirá un

prueba (vėase el gráfico más abajo). 1. Enchufe el aparato y apriete el botón de

de detección de agua funcione correctamente. buneba siguiente para asegurarse que el sistema por ejemplo si el aparato cae al agua. Haga la eu caso de que ocurran situaciones anormales, Circuit Interrupter), el cual apaga el secador ge sednugga jismado ALCI (Appliance Leakage Este aparato está dotado de un cortacircuito **OSU AGAD 3G SETNA**

PRUEBE EL CORTACIRCUITO DE SEGURIDAD

uscello podria producir un incendio de mayor capacidad que la del circuito, ya que 15 amp. NUNCA reemplace el fusible por uno de circuito de 15 amp. o quemar un fusible de electrodomésticos puede activar el interruptor mismo fusible con otros aparatos o Usar este aparato en el mismo circuito o en el

SOITAV 2781 DE 1875 VATIOS **GUIA DE OPERACIÓN PARA EL IMPORTANTE**

calificado. No intente vencer esta función de entra completamente, llame a un electricista no entra por completo, invièrtela. Si aún no manera en la toma de corriente polarizada. Si de seguridad, se podra enchutar de una sola poio es mas ancho que otro). Como medida Este aparato tiene una clavija polarizada (un

de 110 a 125 voitios. disenados para funcionar con Corriente Alterna nertzios). Los secadores estandares estan Uselo solamente con Corriente Alterna (60 Este aparato tue disenado para uso protesional.

DE N20 INSTRUCCIONES **INSTRUCCIONES GUARDE ESTAS**

15. No utilice este aparato con un convertidor

ragugo: y de las aberturas de aire mientras lo està 14. Mantenga su cabello alejado del aparato mientras esta funcionando. 13. No coloque el aparato en ninguna superficie

uso. Déjelos enfriar antes de manipularlos. 17. Los accesorios pueden calentarse durante el

ofras áreas sensibles al calor. 11. No dirija el aire caliente hacia los ojos u

9. No lo utilice al aire libre, ni donde se están

10. No utilice este aparato con una extension se esta administrando oxigeno. nesuqo broductos en serosol (spray) o donde

ninguna de las aberturas o en el tubo de 8. Nunca deje caer ni inserte un objeto en

7. Nunca use este aparato mientras esta cabellos y elementos similares. Mantenga las aberturas libres de pelusas, cama o un sofá, donde se puedan obstruir. el aparato en una superficie blanda, como una 6. Nunca bloquee las aberturas de aire o coloque

guardado. sirededor del aparato, incluso cuando esta calientes. No Jale, retuerza ni enrolle el cable 5. Mantenga el cable alejado de superficies examinen y io reparen.

ceutro de servicio autorizado para que lo agua. Liévelo donde lo ha comprado o a un si ha caido, si està dañado o si ha caido al estan danados, si no funcionan correctamente, 4. Nunca utilice el aparato si el cable o la clavija bor el tabricante.

en este manual. Sólo use accesorios recomendados bara ei cuai tue disenado y tai como se descride 3. Use este aparato únicamente con el propósito niscapacidad.

o cerca de ninos o personas con alguna 2. Este aparato no deberia ser usado por, sobre

GETTING TO KNOW YOUR DRYER

esta conectado. 1. Nunca deje el aparato desatendido mientras

dnemaduras, electrocucion, incendio o lesiones ADVERTENCIA – Para reducir el riesgo de

inmediatamente. No toque el agua. 5. Si el aparato cae al agua, desconèctelo

u otro liquido. 4. No coloque el aparato ni lo deje caer al agua

cser o ser empulado a una banera o un 3. No colodue ni guarde el aparato donde pueda o nus ancus.

2. No lo use mientras esta tomando un bano desbnes de nagrio. 1. Siempre desconecte el aparato inmediatamente

el riesgo de muerte o herida por descarga: cuando el interruptor está apagado. Para reducir permanece eléctricamente activo, incluso PELIGRO - Cualquier electrodoméstico

ALEJADO DEL AGUA OTARAGA EL APARATO **ANTES DE USARLO** LEA TODAS LAS INSTRUCCIONES

sednuidad, entre las cuales las siguientes: se deben tomar precauciones básicas de esbecigimente en la presencia de ninos, siempre Cuando se usan aparatos eléctricos,

SATUATRO IMPORTANTES SEGURIDAD **MEDIDAS DE**

The Conair® Ionic Ceramic Styler is very effective, even at lower temperatures, and helps to give healthier-looking, shiny, more manageable hair with maximum styling control.

HIGH SPEED MOTOR increases the velocity at which air moves through the dryer and into your hair, helping you dry and style your hair faster. It minimizes heat damage and makes hair less frizzy and more manageable.

CERAMIC HEAT TECHNOLOGY will keep your hair healthy and shiny. It generates full spectrum, infrared heat which works on hair molecules to dry them inside & out.

THE IONIZING FUNCTION generates a cloud of negative ions that can:

- neutralize the generally positive charge on flyaway, frizzy hair
- · eliminate static electricity · contribute to shine


other electrical products or appliances may trip a 15 amp circuit breaker or blow a 15 amp fuse. **NEVER** replace the fuse with one rated higher than the capacity of the circuit. Doing so could result in an electrical fire.

CHECK ALCI SAFETY FEATURE EVERY TIME YOU USE APPLIANCE.

Leakage Circuit Interrupter (ALCI), a safety feature that renders it inoperable under some abnormal conditions, such as immersion in water. To make sure the ALCI is functioning properly, perform the following test. The purpose of this test is to allow you to make sure the water sensing system (ALCI) is working.

- on plug (See appropriate diagram below).
- To reset ALCI with a reset button, unit should be unplugged. Then push reset button in, and reinsert plug into outlet.

4. If ALCI is not functioning properly, return appliance to nearest service center.

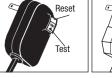



5. It is important that if immersion occurs, this unit be brought to a service center. Do not try to reset. 6. Be sure to repeat test every time you use the unit to confirm ALCI is operational.

Should the appliance go off and the reset button pop up during use, this could indicate a malfunction in the unit. Remove plug from outlet and allow the appliance to cool. Reinsert plug into outlet. The appliance should then function normally. If not, return to an authorized Conair Service Center for evaluation and repair.

SUPER STYLING GUIDE

Your best looks begin with a good haircut that's well maintained. Always treat hair right with superior quality shampoos, conditioners, and finishing products.

DRYING BASICS

1. Shampoo and condition hair with products of your choice. Rinse thoroughly. Towel dry hair to remove excess moisture. Using the drver along with your styling brush, start at a lower setting and direct hot air through a section of hair at a time. Move dryer steadily across each section so that the hot air passes through hair. Direct air flow at hair not scalp. Clouds of negatively charged ions will help to reduce static electricity, control frizzy flyaways and contribute to your hair's shine.

- 2. Keep dryer's air intake vents unobstructed and free from hair while drying.
- 3. To avoid over drying, do not concentrate heat on any one section for any extended length of time. Keep dryer moving as you style.

4. For quick touch ups, between shampoos, dampen hair with a mist of water before styling with the dryer.

5. When using your dryer to create curls and waves, dry hair almost completely on a warmer temperature setting, then finish styling with Cool Shot feature to close hair shaft and lock in style.

GETTING TO KNOW YOUR DRYER

The professional Conair® Tourmaline Ionic Styler is very effective, even at lower temperatures, and helps to give healthier-looking, shiny more manageable hair with maximum styling con-

BODY & VOLUME

To create extra volume turn head upside down while drying. Position the air flow toward the roots for maximum lift. When hair is dry, toss head back and brush hair into place.

STRAIGHTENING

Work with hair in sections when creating a super straight look. Using a large round brush (approximately 2" diameter), hold hair taut in each section and bend ends slightly under as you dry.

MAKING WAVES Tousled, natural- looking

waves are easily created by grasping hair at the roots and scrunching between fingertips while drying. For curlier, wavier hair use the diffuser attachment.





5. Keep the cord away from heated surfaces. **OPERATING** Do not pull, twist, or wrap line cord around **INSTRUCTIONS** dryer, even during storage. 6. Never block the air openings of the appliance This appliance is intended for household use or place it on a soft surface, such as a bed or only. Use on Alternating Current (60 hertz) only. couch, where the air openings may be blocked. Keep the air openings free of lint, hair, and the Standard Dryers are designed to operate at 110 to 125 volts A.C. 7. Never use while sleeping. This appliance has a polarized plug (one blade is wider than the other). As a safety feature, this

mientras lo seca.

ОИРПГАВО

ei cabello entre sus dedos

ei cabeilo a la raiz y estruje

dne barecen naturales, coja

Para crear ondas despeinadas

8. Never drop or insert any object into any open-

ing or hose. 9. Do not use outdoors or operate where aerosol (spray) products are being used or where oxygen is being administered.

10. Do not use an extension cord to operate 11. Do not direct hot air toward eyes or other heat-sensitive areas.

12. Attachments may be hot during use. Allow them to cool before handling.

- 13. Do not place appliance on any surface while it is operating.
- 14. While using the appliance, keep your hair out of it. Keep your hair away from the air in-
- 15. Do not use with voltage converter.
- 16. Be sure the dual voltage selector is in the correct voltage position before operating. Before plugging in the dryer, read the information about the dual voltage contained in the instruction section of this manual.
- 17. This appliance was set at the factory to operate at 125 volts. Refer to the additional information section of this manual for the conversion to 250 volt operation.

SAVE THESE INSTRUCTIONS

IMPORTANT 1875 WATT OPERATING GUIDE

Use of this dryer on the same circuit or fuse with

This appliance is equipped with an Appliance

- 1. Plug in the appliance and press test button
- 2. The appliance will stop working. There will be an audible click and reset button will pop



! **! ! ! ! ! ! ! ! !**







www.conair.com/infiniti

IB-6761

visit us on the web at: product call: 1-800-3-CONAIR or For info on any Conair or Infiniti by Conair

©2006 CONAIR CORPORATION

Glendale, AZ 85307 7475 N. Glen Harbor Blvd Service Department **СОИАІЯ СОЯРОЯНІОИ SERVICE CENTER**

Patent Pending.

06NP092



from state to state. and you may also have other rights, which vary This warranty gives you specific legal rights, limitation may not apply to you.

cidental, or consequential damages, so the above allow the exclusion or limitation of special, in-PLIED, WHATSOEVER. Some states do not ANY OTHER WARRANTY, EXPRESS OR IM-TIAL DAMAGES FOR BREACH OF THIS OR ANY SPECIAL, INCIDENTAL, OR CONSEQUEN-IN NO EVENT SHALL CONAIR BE LIABLE FOR may not apply to you.

implied warranty lasts, so the above limitations states do not allow limitations on how long an THIS WRITTEN, LIMITED WARRANTY. Some **DURATION TO THE 36 MONTH DURATION OF** TICULAR PURPOSE, SHALL BE LIMITED IN CHANTABILITY AND FITNESS FOR A PAR--RAM TO THE IMPLIED WARRANTY OF MER-OR LIABILITIES, INCLUDING BUT NOT LIM-ANY IMPLIED WARRANTIES, OBLIGATIONS,

ot manufacture. ranty period shall be 36 months from the date the absence of a purchase receipt, the war-1-800-366-0937 for shipping instructions. In brovide proof of purchase and should call and handling. California residents need only your purchase receipt and \$7.00 for postage listed below that is nearest you, together with the defective product to the service center To obtain service under this warranty, return manship or materials.

of purchase if the appliance is defective in workunit tree of charge for 36 months from the date Conair will repair or replace (at our option) your

YTNARAW RABY BERHT GETIMIJ

the dryer. or lie loose and straight at the point of entry into

line cord around dryer. Allow the cord to hang location, out of reach of children. Do not wrap nected, allowed to cool and stored in a safe, dry When not in use, your dryer should be discon-

STORAGE - Important

cumer.

No repairs should be attempted by the conauthorized Conair service representative only. operate properly, return it for repair to an If the cord or dryer is damaged or does not operates intermittently.

ately if damage is visible or unit stops or requently for damage. Stop use immediing it to rupture and short. Inspect the cord the high flex point of entry into the dryer, caustightly around the dryer. Damage will occur at twisted, or severely bent. Never wrap the cord NEVER allow the power supply cord to be pulled,

CAUTION

the air vents are clean. 10 to 15 minutes before restarting. Make sure nubing the cord and allow the dryer to cool for sonal injury. It the unit or the heat turns oft, qryer or the heat off to prevent damage or peroccurs, an automatic safety device will shut the canse the dryer to overheat. It overheating Blocked or clogged air intake vents will obenings with a small brush or the brush to cool and clean dust and lint from air intake When cleaning is needed, unplug the cord, allow bertormance, the dryer must be kept clean.

Indrication is needed. For proper operating Your dryer is virtually maintenance free. No

USER MAINTENANCE

stopping the electricity flow. mediately to a small electric current leak by *GFCI is a sensitive device which reacts im-

the price is small! Don't wait...install one A GFCI can save your life! Compared to that,

you tar greater protection. circumstances. A GFCI offers brotect you under these tuse of circuit breaker won't if the switch is "off." A regular bindged in, the electric shock can kill you...even don't mix. It your hair dryer talls in water while it's WHY DO YOU NEED A GFCI? Electricity and water

garages, and outdoor outlets of all new trical Code now requires GFCI's in the bathrooms, installed by your electrician. The National Eleciuto the electrical outlet or a permanent unit type is best for you—a portable unit that plugs

Jonr local electrician can help you decide which BATHROOM, INSTALL A GFCI* NOW! IF YOU MUST USE YOUR HAIR DRYER IN THE



This message about...

..can save a life!

NTERRUPTERS

TIUDAI

ALTO

Este mensaje sobre los...

NTERRUPTERS

(Interruptores de circuito contra fallas a tierra)

...:Puede salvar una vida!

¡SI DEBE USAR EL SECADOR EN EL CUARTO DE BAÑO, INSTALE UN GFCI* AHORA!

Su electricista local le puede ayudar a decidir cual tipo escoger – una unidad portátil que se enchufa en la toma eléctrica o una unidad permanente instalada por él. El Código Nacional de Electricidad ahora exige que los cuartos de baño, garajes y exteriores de todas las casas nuevas sean equipados con GFCI.

¿Por qué necesita un GFCI? La electricidad y el agua no deben juntarse. Si su aparato cae al agua mientras está conectado, una descarga eléctrica puede causar su muerte...incluso si el



interruptor está apagado. Un fusible o un interruptor de circuito normal no le protegerá en estas circunstancias. Un GCFI le ofrece más protec-

:Un GCFI le puede salvar la vida! Comparado con ella, el precio es bajo! No espere...instale uno ahora mismo!

*GCFI es un dispositivo sensible que reacciona inmediatamente a una pequeña pérdida de corriente, deteniendo el flujo de electricidad.

INSTRUCCIONES DE MANTENIMIENTO

Su secador casi no necesita mantenimiento. No necesita lubricación. Para que funcione correctamente, debe mantenerlo limpio. Cuando sea necesario limpiarlo, desenchúfelo, déjelo enfriar y saque el polvo y las pelusas de las aberturas de aire con un cepillo pequeño o el cepillo accesorio de una aspiradora. La superficie exterior del secador sólo se debe limpiar con un paño limpio.

El secador se recalentará si las aberturas de aire están bloqueadas u obstruidas. En tal caso, un sistema de seguridad automático apagará el secador o cortará la temperatura para evitar daños o lesiones personales. Si esto sucede, desenchufe el aparato y deje que se enfríe de 10 a 15 minutos antes de encenderlo de nuevo. Asegúrese que las ventilaciones de aire están limpias...

PRECAUCIÓN

NUNCA jale, retuerza ni doble mucho el cable eléctrico. Nunca lo enrolle con fuerza alrededor del secador. Esto podría dañar la junta flexible que lo conecta al secador, produciendo su ruptura o un cortocircuito. Inspeccione el cable con frecuencia para asegurarse que no está dañado. Deie de usar el aparato inmediatamente si el cable parece dañado, si el aparato deja de funcionar o funciona de manera intermitente

Si el cable o el aparato están dañados o no funcionan correctamente, llévelo a un centro de servicio autorizado únicamente. No trate de repararlo.

ALMACENAJE - Importante

Cuando no usa el aparato, desconéctelo, déjelo enfriar y guárdelo en un lugar seco y seguro, fuera del alcance de los niños. No enrolle el cable alrededor del aparato. Deje que el cable cuelgue o que la junta que lo conecta al secador esté suelta y recta.

GARANTÍA LIMITADA POR TRES AÑOS

Conair reparará o remplazará (a su opción) su aparato sin cargo por un período de 36 meses a partir de la fecha de compra si presenta defectos de mano de obra o en los materiales

Para obtener servicio técnico bajo esta garantía, lleve o mande su aparato al Centro de Servicio indicado a continuación, junto con su recibo de compra y un cheque de \$7,00US por gastos de envío v de maneio. Los residentes de California sólo necesitan dar una prueba de compra y deben llamar al 1-800-366-0937 para recibir instrucciones de envío. En ausencia del recibo de compra, el período de garantía será de 36 meses a partir de la fecha de fabricación.

CUALQUIER GARANTÍA, OBLIGACIÓN O RESPONSABILIDAD IMPLÍCITAS, INCLUYENDO PERO NO LIMITADAS A LA GARANTÍA IMPLÍCITA DE COMERCIABILIDAD Y APTITUD PARA UN PROPÓSITO ESPECÍFICO, ESTARÁN LIMITADAS POR LOS 36 MESES DE LA PRESENTE GARANTÍA ESCRITA. Algunos Estados no permiten limitaciones sobre la duración de una garantía implícita, de modo que las limitaciones mencionadas pueden no regir para usted.

CONAIR NO SERÁ RESPONSABLE EN NINGÚN CASO POR ALGÚN DAÑO ESPECIAL INCIDENTAL O CONSECUENTE DEBIDO AL INCUMPLIMIENTO DE ESTA O DE CUALQUIER OTRA GARANTÍA. EXPRESA O IMPLÍCITA. Algunos Estados no permiten la exclusión o limitación de daños especiales, incidentales o consecuentes, de modo que las limitaciones mencionadas pueden no regir para usted.

Esta garantía le otorga derechos legales específicos y usted puede tener otros derechos que varían de un Estado a otro.

surface of the dryer should be wiped clean with

attachment of a vacuum cleaner. The outer



Patente en trámite.

CENTRO DE SERVICIO

CONAIR CORPORATION Service Department 7475 N. Glen Harbor Blvd Glendale, AZ 85307

©2006 CONAIR CORPORATION

Para más información sobre cualquier producto de Conair o Infiniti™ de Conair. llame al 1-800-3-CONAIR o visite nuestro sitio en Internet www.conair.com/infiniti

06NP092

PRUEBE OTROS PRODUCTOS INFINITI™ DE CONAIR®





Secador Iónico Con Turmalina



de Modelado

Modelo 217